




# MacBook Pro 13" Retina Display Early 2015 Logic Board Assembly Replacement

Prereq to remove the logic board

Written By: Sam Lionheart

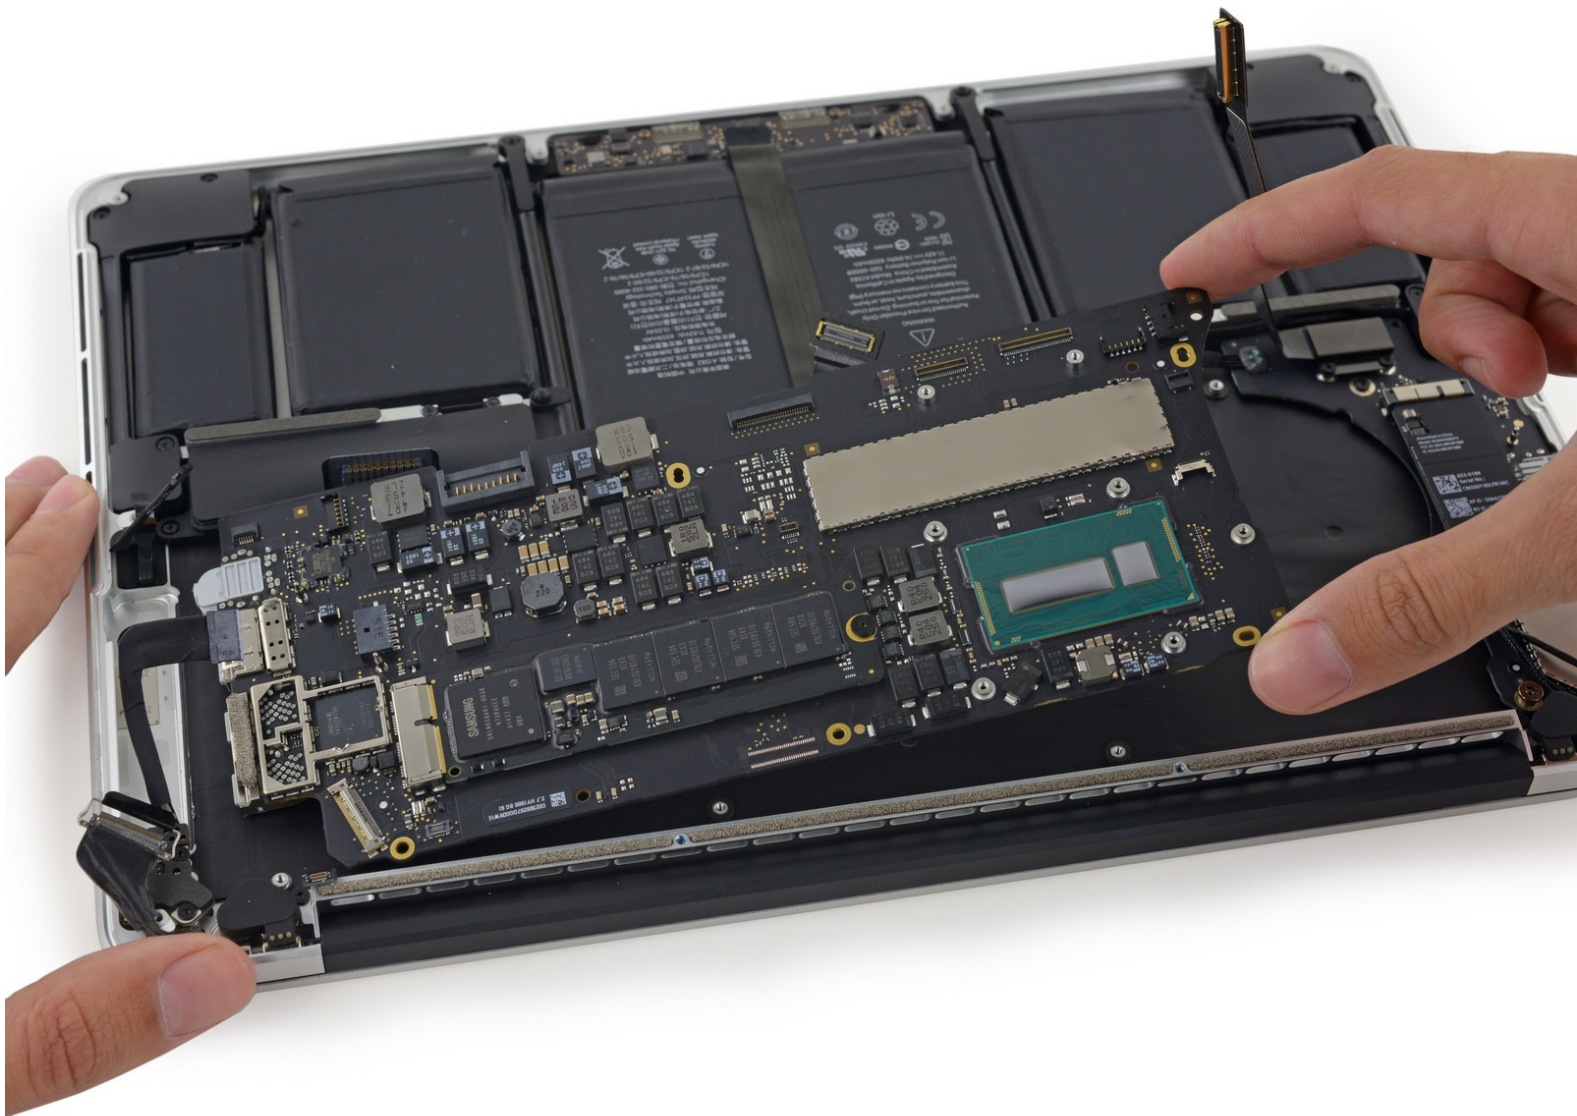

## INTRODUCTION

Prereq to remove the logic board



---



### TOOLS:


- [T5 Torx Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Logic Board Assembly

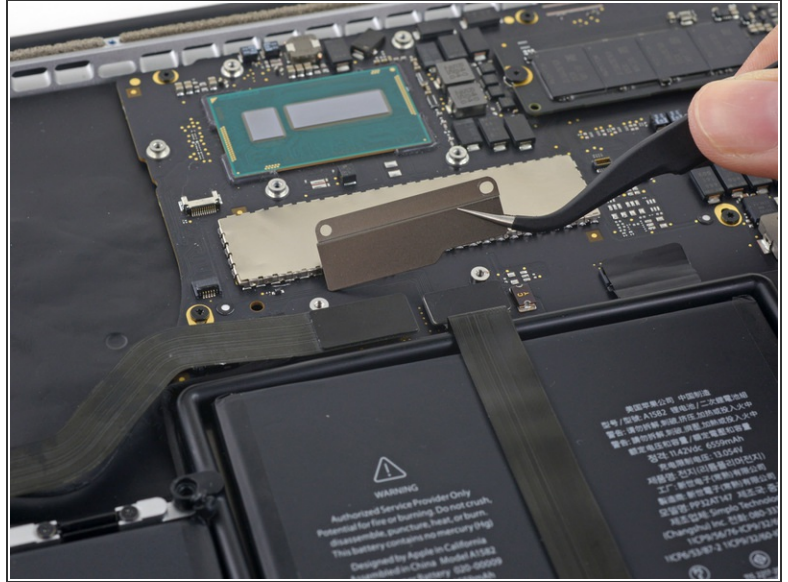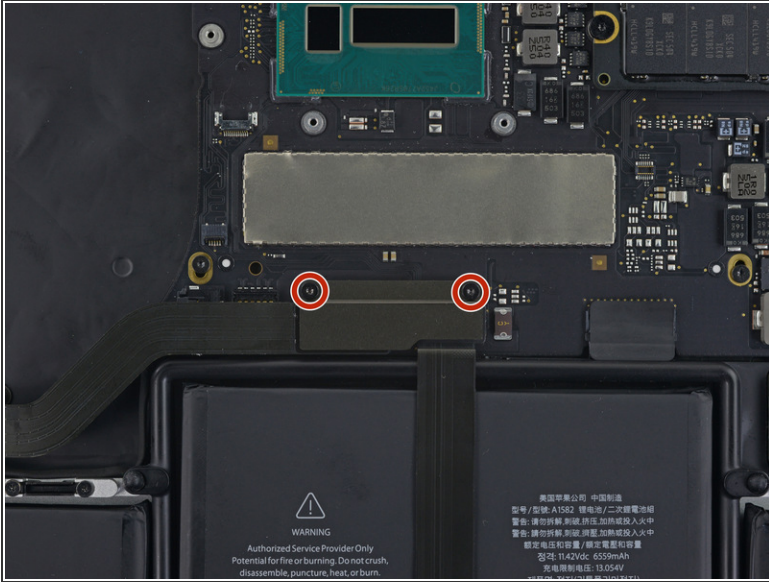

- Remove the two 2.1 mm T5 Torx screws securing the I/O board cable bracket to the logic board.
- Remove the I/O board cable bracket.

## Step 2

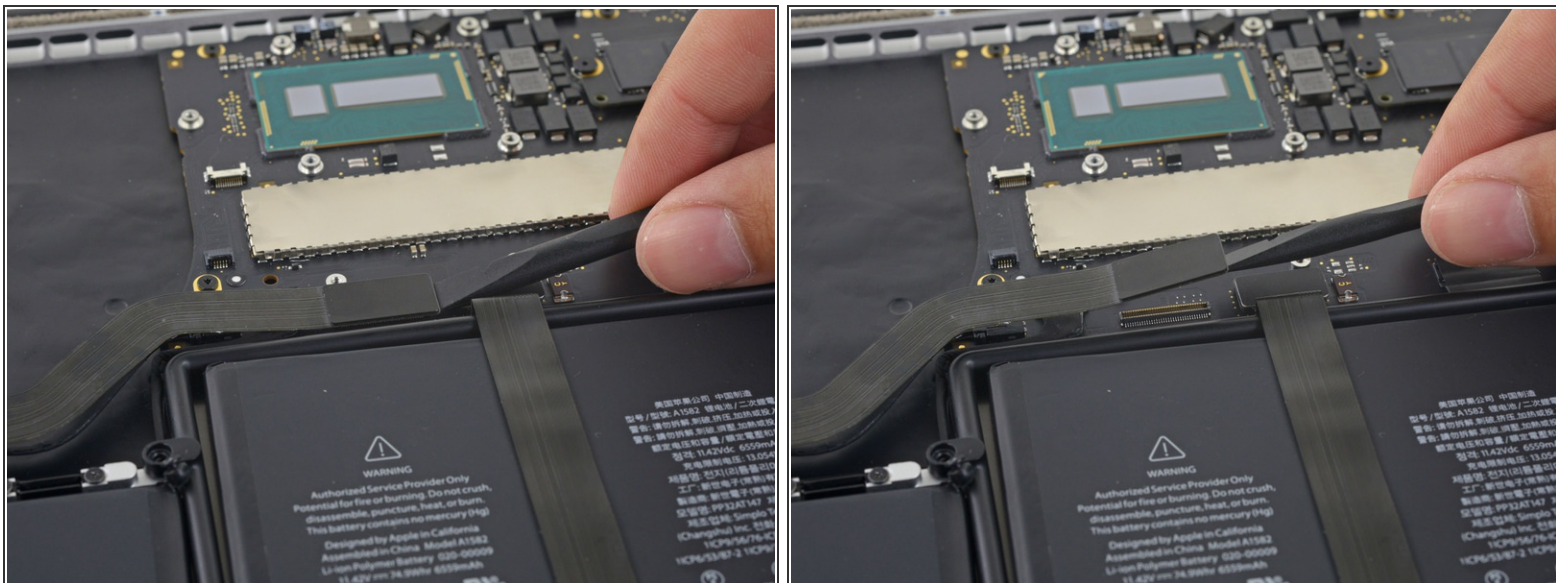


- Use the flat end of a spudger to pop the I/O board connector straight up off its socket on the logic board.

⚠ Be careful to only pry up on the I/O board cable, **not** on the socket itself or you risk damaging your logic board.





## Step 3

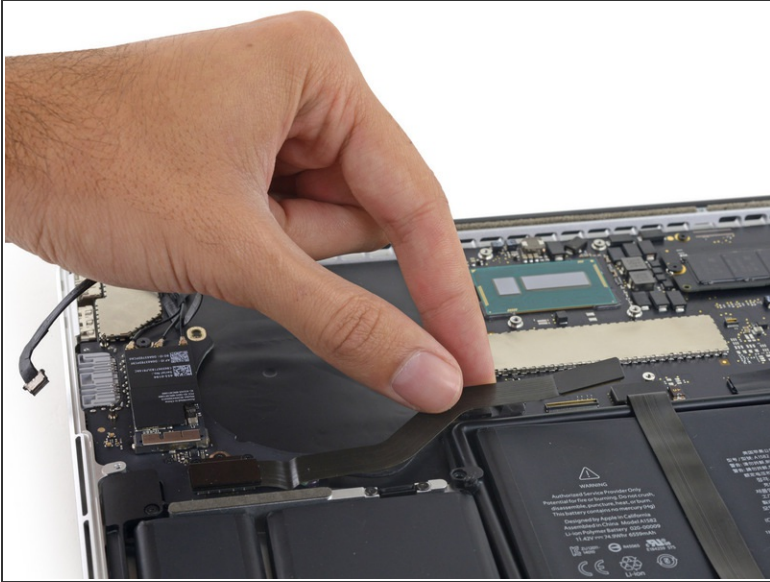

- Lift the logic board end of the I/O board cable straight up to bend it out of the way.

⚠ To avoid damage to the cable, fold only at the bend in the I/O board end of the cable.

## Step 4

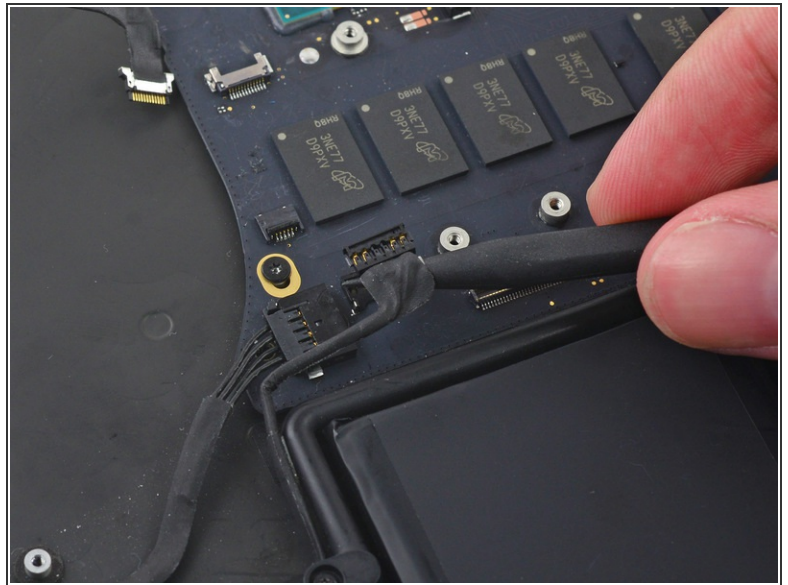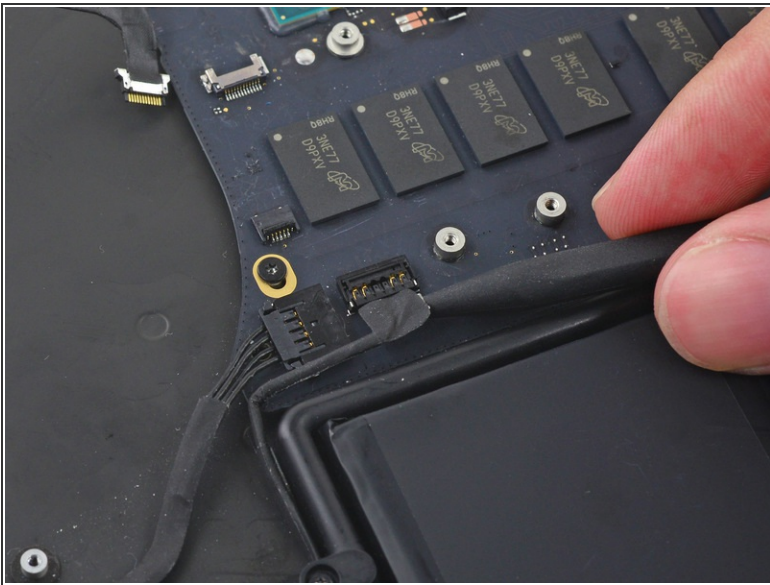


- Use the tip of a spudger to lift the right speaker connector straight up out of its socket on the logic board.

## Step 5



- With the tip of a spudger, push on either side of the I/O board connector to walk it out of its socket on the logic board.


## Step 6

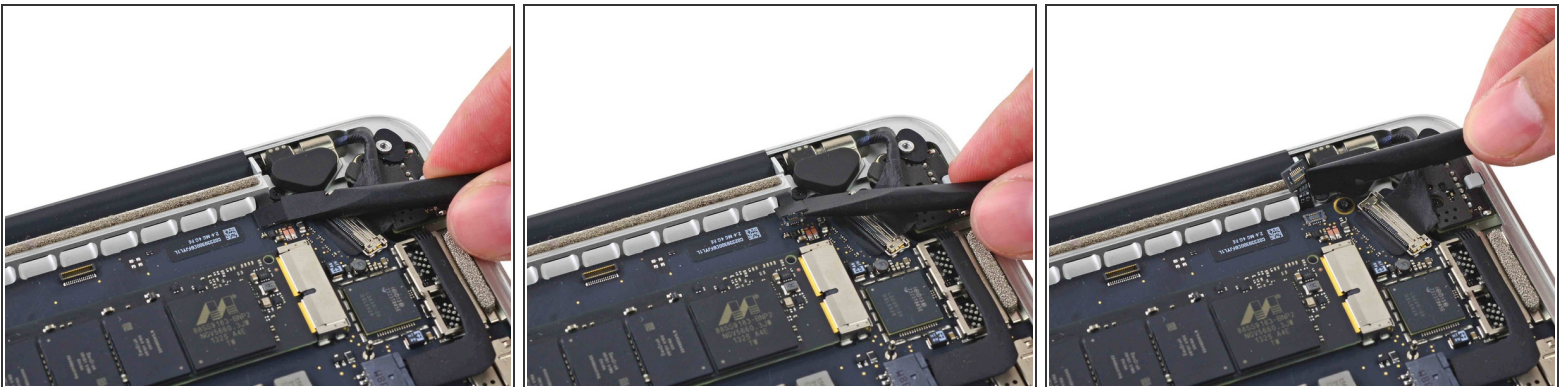

- Use the flat end of a spudger to disconnect the keyboard backlight cable and bend it up out of the way of the logic board.




## Step 7

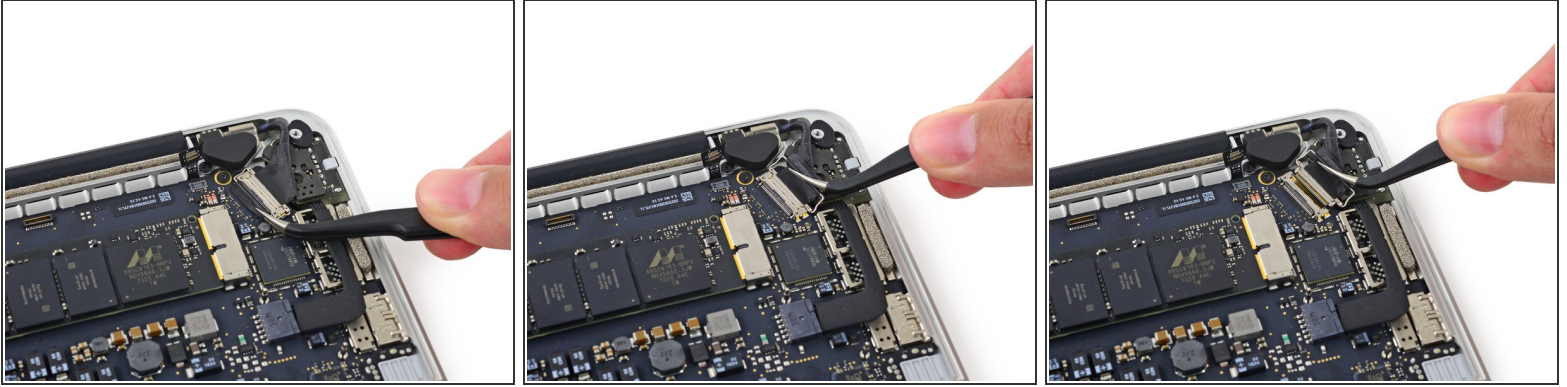


- Grab the black plastic tab to flip the display cable connector open and pull it straight out of its socket on the logic board.

## Step 8

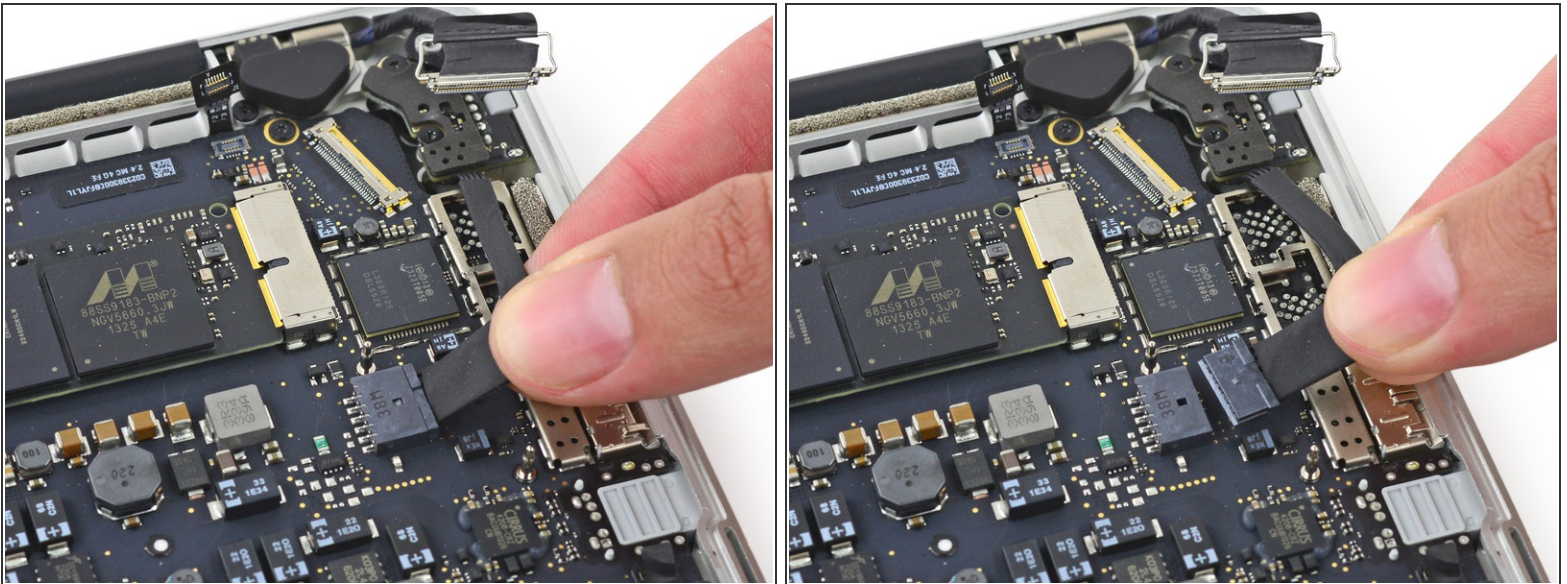


- Carefully pull the DC-In board connector straight out of its socket on the logic board.

## Step 9

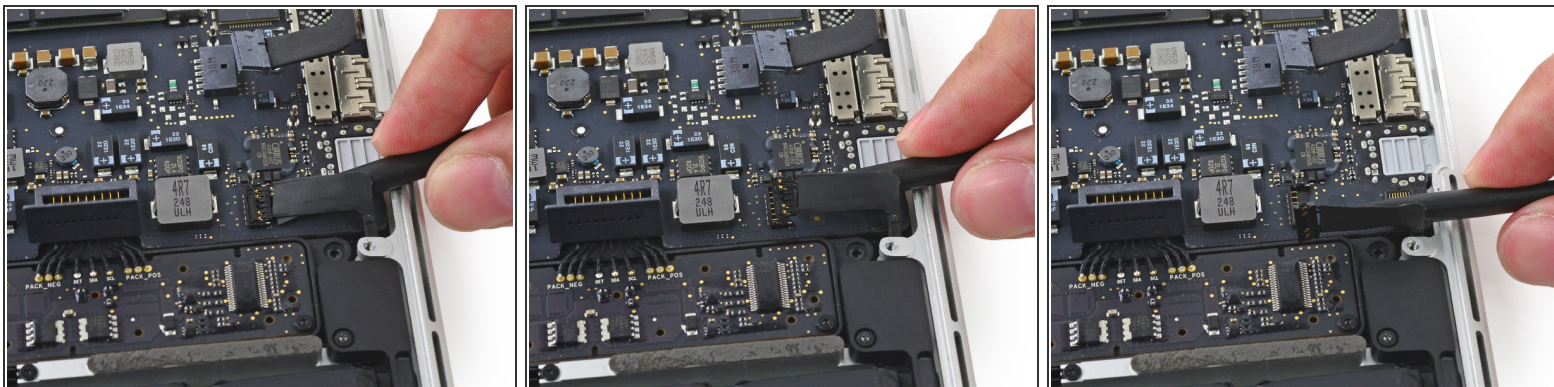

- Wedge the flat end of a spudger under the left speaker cable near the connector and lift it straight up out of its socket and fold it out of the way.


## Step 10

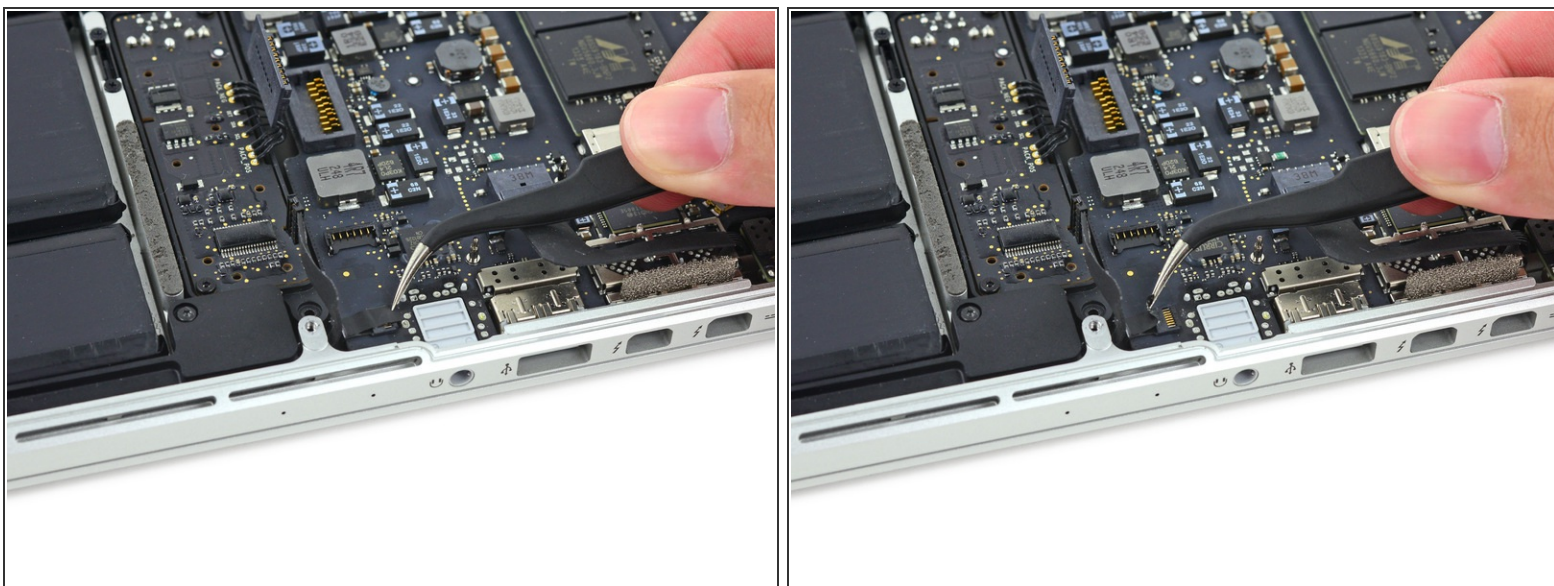

- ⓘ If necessary, peel back any tape covering the microphone cable ZIF connector.




## Step 11

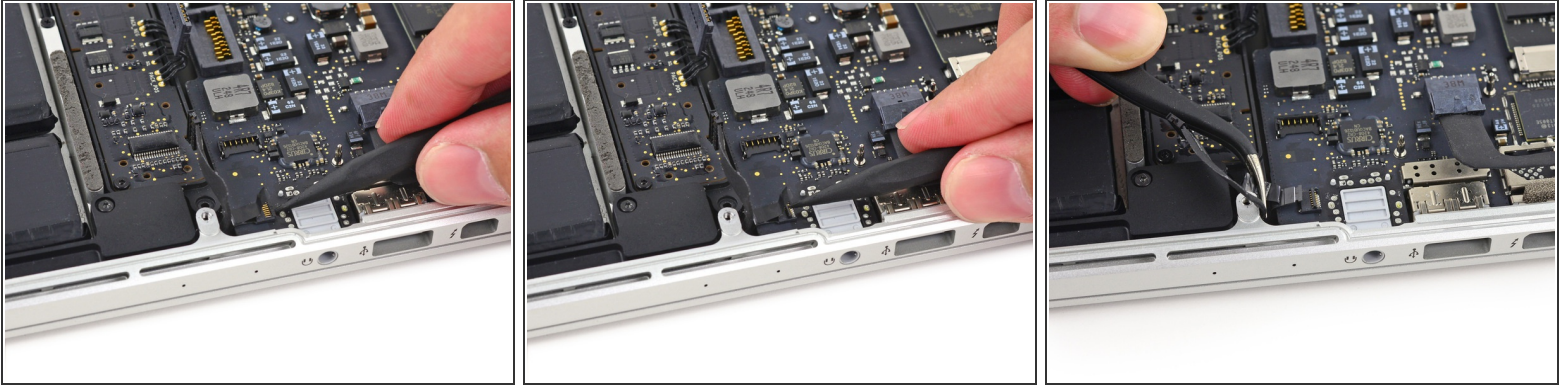



- Use the tip of a spudger to flip the retaining tab on the microphone cable ZIF connector.
- Pull the microphone cable out of its socket on the logic board.

## Step 12

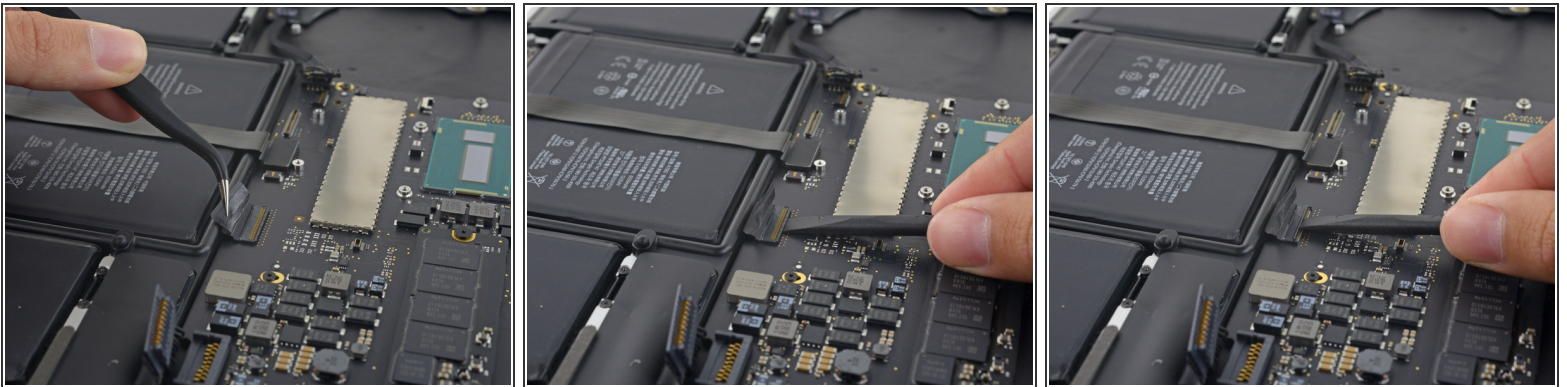




- ⓘ If necessary, peel back any tape covering the keyboard cable connector.
- Use the tip of a spudger to flip the retaining tab on the ZIF connector.

## Step 13

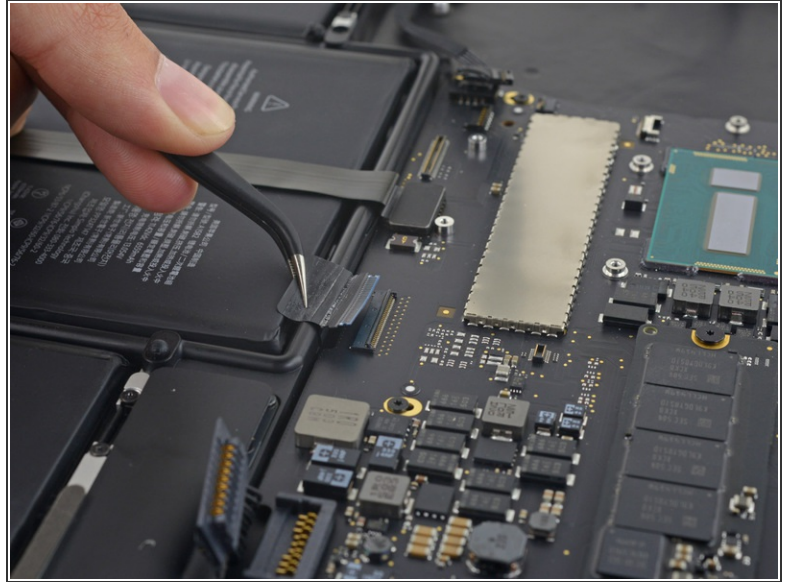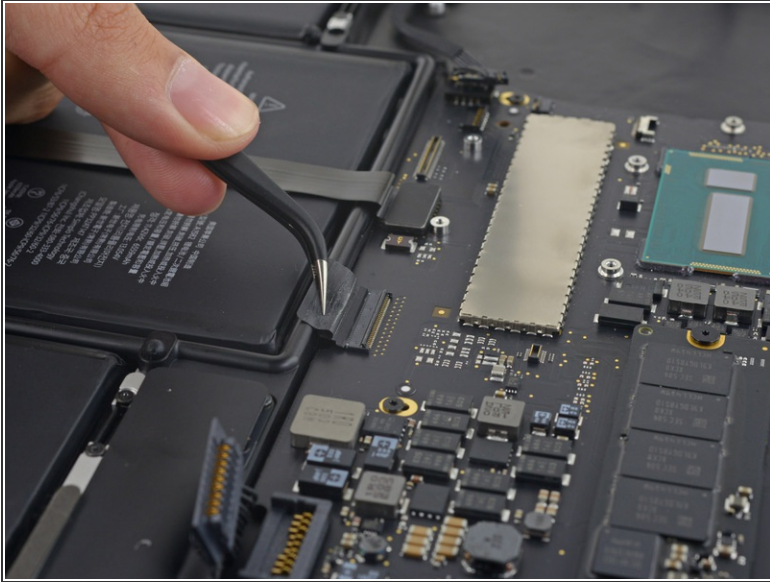

- Pull the keyboard cable straight out of its ZIF socket on the logic board.


## Step 14

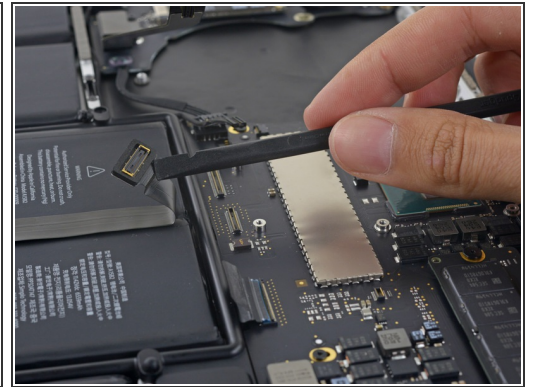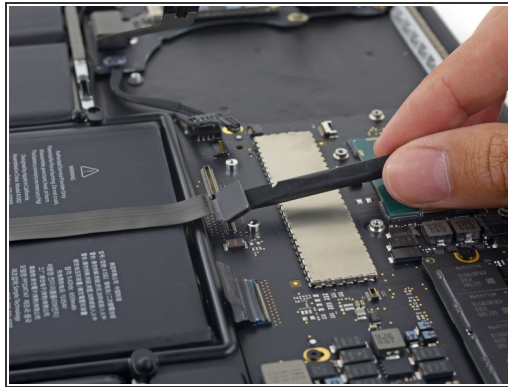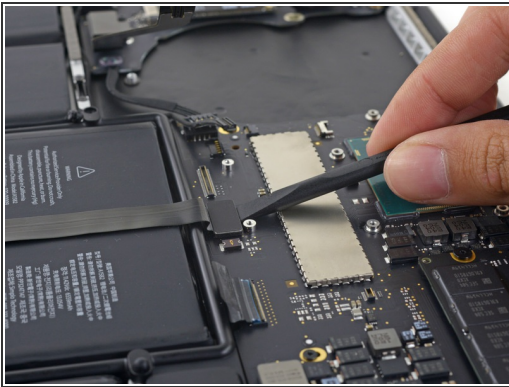

- Use the flat end of a spudger to pop the trackpad connector straight up off its socket on the logic board.
- Fold the cable out back over the battery to clear the way for the logic board.



## Step 15

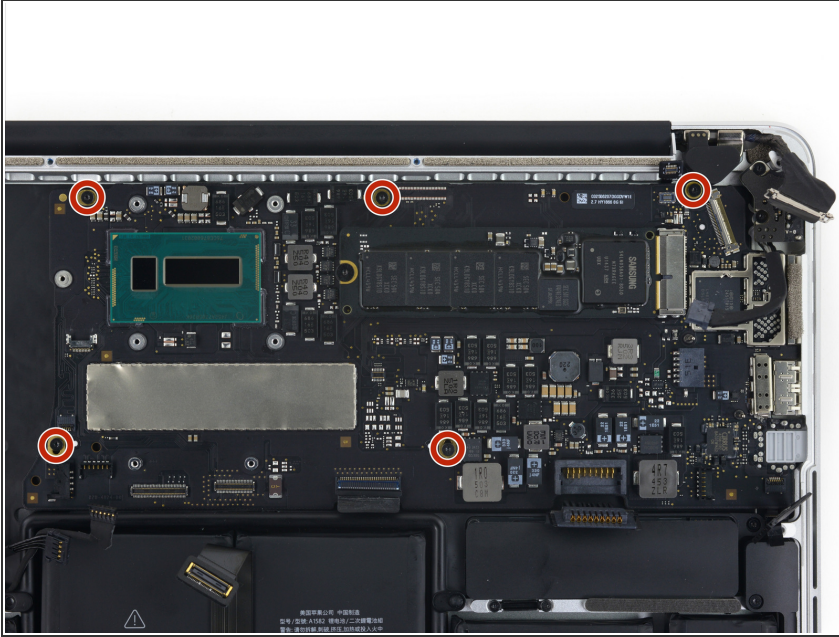

- Remove the five 3.5 mm T5 Torx screws securing the logic board to the upper case.

## Step 16



- Lift the processor end of the logic board up slightly and pull it toward the fan recess to free the ports from the edge of the upper case.
- Remove the logic board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-28 05:35:44 PM.